

Operating Instructions For PHAZR-5 Cable Remote Control

UR5U-9000 & UR5U-9020



Universal Remote Control, Inc.
www.universalremote.com
OCE-0081D Rev 06 (14/5/23)

1 Introduction

The PHAZR-5 UR5U-9000 & UR5U-9020 is designed to operate the CISCO / SA, Pioneer, Pace Micro, Samsung and Motorola digital set tops, Plus the majority of TV, AUD, DVD and AUX equipment on the market as shown below.

CBL : Cable Set-top Box **TV** : Televisions
AUD : Audio Receivers **DVD** : DVD Players
AUX : Media PC, Gaming System, etc.


2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

STEP1 Remove the battery compartment cover on the back of your remote control.

STEP2 Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP3 Replace the battery compartment cover.

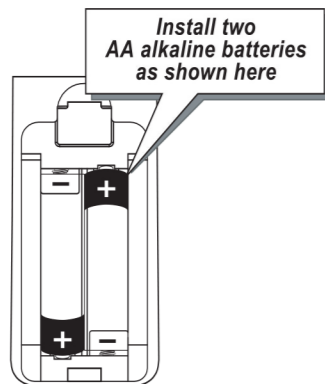

3 Operations

DEFAULT STATE:


Device Default: Cable Set-Top Box (STB)

Channel Default: CABLE channel and numbers through the CABLE STB. You have the option of controlling your CABLE channel and numbers through the TV or AUD. Refer to section I for programming steps.

Volume Default: Volume and Mute control are automatically transferred to the respective Component based on the Device selected:

CBL: Cable Set-Top Box ; **TV:** TV ; **AUD:** AUD. **DVD:** TV ; **AUX:** AUX. You have the option of controlling CABLE Volume and Mute through the TV, DVD or AUD. Refer to section H for programming steps.

4 Button Functions

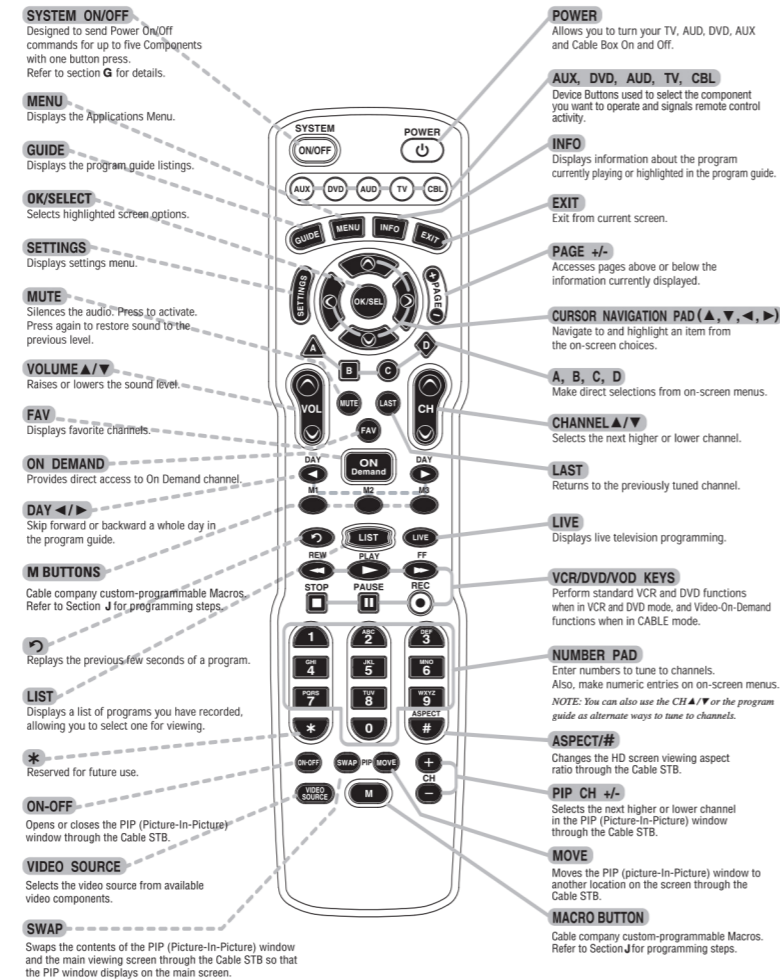

5 Programming the Remote Control

IMPORTANT SETUP NOTE!

In this section when you are instructed to press a [DEVICE] button, that means to press either the CBL, TV, AUD, DVD or AUX button, depending on what device you are programming the remote to operate.

There are three ways you can program your remote:

- * Quick Set-Up Method
- * The Pre-Programmed 3-Digit Code Method
- * The Auto-Search Method

The Quick Set-Up Method is a unique feature that enables the fastest and easiest setup by using a 1 digit code. This is the quickest way to set up devices made by popular manufacturers.

The Pre-Programmed Code Method allows you to setup all of the buttons at once by entering 3-digit code numbers that correspond with the components manufacturer/brand. Code tables for this method are on the backside of the operating instructions.

The Auto-Search Method scans through all of the codes in the remote control, one at a time allowing you to identify the correct code.

IMPORTANT SETUP NOTE!

This pertains to all programming steps. When you are in setup mode the device LED will light for 30 seconds. If you do not press a button within 30 seconds, the LED light will turn off and exit setup mode, and you will need to start over.

A. Quick Set-Up Method

STEP1 Turn on the component you want to program. To program your TV, turn on the TV.

STEP2 Press and hold the [DEVICE] key for 5 seconds until the Device LED will blink once and stays on. Continue to hold the [DEVICE] key and press the number key assigned to your brand in the Quick Set-up Code Table and release both [DEVICE] key and the number key to save the code. The Device LED will blink twice to confirm that the code is stored.

STEP3 Point the remote control at the component.

STEP4 Press the power button. If it turns off, it is programmed for your component. If it does not turn off, use the Pre-Programmed 3-Digit code Method or Scanning Method.

Repeat the steps above for all components (CBL, TV, AUD, DVD, AUX).

B. Quick Set-up Code Tables

CBL

Quick Number	Manufacturer/Brand
N.º de acceso rápido	Fabricante/Marca
0	PACE DTA
1	SA/CISCO, SAMSUNG, PACE DIGITAL
2	MOTOROLA DIGITAL
3	MOTOROLA DTA
4	EVOLUTION DTA
5	CISCO IPTV
6	ADB IPTV
7	TECHNICOLOR
8	AMINO 140/540 IPTV
9	MOTOROLA IPTV

TV

Quick Number	Manufacturer/Brand
N.º de acceso rápido	Fabricante/Marca
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

AUDIO

Quick Number	Manufacturer/Brand
N.º de acceso rápido	Fabricante/Marca
0	ROTEL
1	DENON
2	YAMAHA
3	MARANTZ
4	SONY
5	INTEGRA
6	HARMAN KARDON
7	PIONEER
8	ONKYO
9	LEXICON

DVD

Quick Number	Manufacturer/Brand
N.º de acceso rápido	Fabricante/Marca
0	HITACHI
1	SONY
2	PHILIPS
3	SAMSUNG
4	PHILIPS MAGNAVOX
5	PANASONIC
6	LG
7	JVC
8	DENON
9	PIONEER

AUX

Quick Number	Manufacturer/Brand
N.º de acceso rápido	Fabricante/Marca
0	BOSE
1	HP
2	ONKYO
3	APPLE / iPod
4	MICROSOFT / XBOX
5	SONY / PS2
6	LUTRON
7	X-10
8	YAMAHA
9	ROKU

C. Pre-Programmed 3-Digit Code Method

STEP1 Turn on the equipment that you want the remote control to operate (Cable Box, TV, DVD, etc.).

STEP2 Press the [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP3 Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables. If there are more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

***Note :** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above to continue the Auto Search Method.

STEP 3 above using the next three digit code number from the brand list.

STEP4 Store the three-digit code by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

D. Auto-Search Method

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by following steps:

STEP1 Turn on the equipment that you want the remote control to operate (Cable Box, TV, DVD, etc.).

STEP2 Press the [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP3 Press the [CH ▲] or [CH ▼] button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the [CH+] or [CH-] button as soon as the equipment turns off.

***Note :** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above to continue the Auto Search Method.

STEP4 Press the same [DEVICE] button to store the code. The Device LED will blink twice to confirm that the code has been stored.

E. To Identify the 3-Digit Code Programmed for a Device

STEP1 Press the appropriate [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [INFO] button. The device LED will blink a number of times indicating the number of each digit for the code.

Each digit is separated by a one second interval of the LED being off.

Example : One blink, (pause) three blinks, (pause) eight blinks indicates the code number 138.

***Note :** Ten blinks indicates the number 0.

F. Programming the AUX Device

You can take advantage of the AUX function to program a devices such as a media PC, gaming console or satellite radio receiver. Follow the instruction in section C to program an AUX device. You can also program the AUX button for a second TV, DVD or Audio Device. To do this follow the instructions below.

STEP1 Turn on the 5th device you want to program (TV, AUD, DVD, etc.).

STEP2 Press the [AUX] button and the [OK/SEL] button simultaneously for 3 seconds. The [AUX] device LED will turn on for 30 seconds.

STEP3 Press the [Device] button For the type of device you want to setup. Point the remote control toward the device and enter the 3-digit code number assigned to your brand.

***Note :** To program a second TV press TV, etc.

STEP4 When the equipment turns off verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, enter the next 3-digit code number from the brand list.

STEP5 Once you have found the correct 3-digit code, save it by pressing the [AUX] button one more time. The [AUX] LED light will blink twice to confirm the code was stored.

G. Programming the System On/Off Button

This allows you to program the System On/Off button so it can send up to five power On/Off commands with one button press.

STEP1 Press the [CBL] button.

STEP2 Press the [SYSTEM ON/OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP3 Press the first [DEVICE] button you want to store in the [SYSTEM ON/OFF] button and then press [POWER]. Repeat this for the other components you want to turn on/off with the [SYSTEM ON/OFF] button.

STEP4 Press the [CH ▲] button to save the power commands you stored. The [CBL] button will blink twice to confirm the commands have been saved.

H. Programming Volume Control

Volume and Mute control are factory programmed to automatically transfer to the respective Device mode You select, as follows:

CBL : CBL **T V** : TV **AUD** : AUD
DVD : TV **AUX** : AUX

If you wish to store the TV volume control in CBL mode, use the following steps.

STEP1 Press the [OK/SEL] button and [CBL] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [VOL ▲] button. The device LED will blink.

STEP3 Press [TV] button. The device LED will blink twice to confirm the programming.

***Note :** To return CBL device to CBL volume repeat steps above replacing [TV] with [CBL] in Step 3.

I. Programming Channel Control

You can program the channel controls (Channel Up, Channel Down, Last and Numbers) from one Device to operate in another Device mode. Default channel control settings on the remote control are as follows:

CBL : CBL **T V** : CBL **AUD** : AUD
DVD : DVD **AUX** : AUX

If you wish to store the TV channel controls in TV mode, use the following steps.

STEP1 Press the [OK/SEL] button and [TV] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [VOL ▼] button. The device LED will blink.

STEP3 Press [TV] button. The device LED will blink twice to confirm the programming.

***Note :** To return TV device to CBL channel repeat steps above replacing [TV] with [CBL] in Step 3.

J. Programming a 'Macro' button.

If your remote model has custom-programmable Macro buttons available(See Section 4), they can be programmed to act as a 'Macro' or Favorite Channel button in CABLE mode. This allows you to program up to five 2-digit channels, four 3-digit channels or three 4-digit channels that can be accessed with one button press.

STEP1 Press the [CBL] button to select the CBL mode.

STEP2 Press the [MACRO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP3 Enter the the 2, 3 or 4-digit code for the channel you want programmed first (for example, 007) using the Number Pad, then press the [STOP] button. Then enter the code for the next channel (for example, 050), then press the [STOP] button. Repeat this process for the third channel. The [CBL] button will blink once for each channel entered.

STEP4 Press the [CH ▲] button to store the channels that were selected. The [CBL] button will blink twice to confirm the storage of commands.

To access the programmed channels, press the [MACRO] button once. This will bring up the first channel. Press once again and it will bring up the second channel. Press again and it will bring up the third channel.

K. Low Battery Warning

When the batteries are low and need to be replaced with fresh batteries, the Device LED lights will blink 2 times in sequence whenever a [POWER] button is pressed to turn on equipment.

L. Memory Lock System

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

M. Record Your Component Set-up Codes

TV Set-up Code Number:

AUD Set-up Code Number:

DVD Set-up Code Number:

AUX Set-up Code Number:

For additional information about your remote control, go to www.universalremote.com

6 Set-up Code Tables

CBL-CABLE Converters
CBL- Caja de televisión por cable

Manufacturer/Brand Fabricante/Marca	Set-Up Code Number El Número del Código de Sistema
CISCO/SA	001 003 041 042 045 046
PIONEER	001 103 034 051 063 076 105
PACE	001 002 005
SAMSUNG	001 030
MOTOROLA	002 111 148
CE-LABS	164
DIGEO	153
EVOLUTION	189
EVOLUTION FTA	158
GENERAL INSTRUMENT	005 103 104
HAMLIN	049 050 055
HITACHI	103 055
JERROLD	005 004 103 005 003 008 009 010 069
MAGNAVOX	010 012
MEMOREX	052
MOXI	111 252 153
NUFUSION	192
PANASONIC	044 047
PHILIPS	006 012 013 020 085
PULSAR	052
RCA	047
REGAL	049 050
REGENCY	057
SKY	230 204
SONY	108
SPRINGER	047
TECHNICOLOR	365
TELNET	354
TOTCOM	039 040 056
TOSHIBA	052
VIEWSTAR	012 015
ZENITH	052 060 093 100

CBL-IP TV
CBL-IP TV

Manufacturer/Brand Fabricante/Marca	Set-Up Code Number El Número del Código de Sistema
ADB	254
AMINO	260
CISCO	313
MOTOROLA	253

TV
TV-Televisores

Manufacturer/Brand Fabricante/Marca	Set-Up Code Number El Número del Código de Sistema
A MARK	112 143
ABEX	025
ACCURIAN	036
ADMIRAL	072 251 333
AD NOTAM	672
ADVENT	247 388
ADVENTURA	001
AFFINITY	680
AIKO	103
AKAI	116 146 248 404 405 473 475 323 387 391 615
ALBATRON	017
ALERON	028
AMERICA ACTION	043
AMPRO	073
AMSTRAD	052
ANAM	043 054 056 080 112
AOC	116 363 112 058 616
APEX	572
APEX DIGITAL	006
AQUAVISION	573 574 686

TV-Projectors
TV-Projectores

Manufacturer/Brand Fabricante/Marca	Set-Up Code Number El Número del Código de Sistema
PANASONIC	359 607
RUNCO	342 182
SANYO	511 266 657
SELECO	205
SHARP	308
SIM2	205
SONY	646 702
TOSHIBA	230
VIDIKRON	342 174 188 192
YAMAHA	370

AUDIO
AUDIO

Manufacturer/Brand Fabricante/Marca	Set-Up Code Number El Número del Código de Sistema
ADCOM	082 092 225 161 269 356
AiWA	018 104 202 203 213 211 188
AKAI	189
ANTHEM	335 337
ARAGON	687
ARCAM	141 077
ATLANTIC TECHNOLOGY	342
AUDIO FILE	071
B & K	096 097
BOSE	070 224
BOSTON ACOUSTICS	447
CAMBRIDGE AUDIO	684
CARVER	006 028 061 071 201 214 226 185 013 077 284
CARY AUDIO DESIGN	378
CITATION	148
CLARION	026
DENON	340 109 215 230 234 330 679 569 774
DIGITAL PROJECTION	660
DVICO	570
ELAN	057 290
ENLIGHTENED AUDIO	099 098
ESCIENT	451
FISHER	214 182
FLEXTRONICS	378
FOSGATE AUDIOINCS	148 342
GOLDSTAR	008
HARMAN KARDON	318 148 233 077 028 118
HITACHI	020
INTEGRA	275 017 046 108 080 209 381
JAMO	399
JCPENNEY	216
JVC	163 191 114 279 291
KENWOOD	026 066 145 192 182 005 280 374
KLEGG	686
KLH	331
KLIPSCH	687
KOSS	216
KRELL	072 384 672
LEXICON	357 120 235 236 237 360
LINN	124 377
LUXMAN	009 139 052 165 115 004
MAGNAVOX	086 164 152 077
MARANTZ	006 028 031 040 063 185 186 265 289 492 712 719
MCINTOSH	238 286 311
MERIDIAN	100 012 013 028
MITSUBISHI	242 204
MONDIAL	157 158 042 043 081 112
MYRYAD	077
NAD	186 113
NAKAMICHI	040 244 245 172 183 287
NEC	176
NILES	403
ONKYO	046 275 017 108 080 209 381
OPTIMUS	026 041
OUTLAW	342
PANASONIC	032 195 219 177 292 626
PARASOUND	129 130 132 261 294 295 333 334

DVD
DVD- Reproductor digital de video

Manufacturer/Brand Fabricante/Marca	Set-Up Code Number El Número del Código de Sistema
ACCURIAN	003 268
ADCOM	157
ADVENT	005
AiWA	146
AKAI	281
ALLEGRO	091
ALPINE	098
ANW	006 007
ANTHEM	361
APEX DIGITAL	087 111 115
ARCAM	122
ASPIRE DIGITAL	008 009
AUDIOVOX	003 010 014 015 149
BELCANTO DESIGN	016
BLAUPUNKT	111
BROKSONIC	130
BUFFALO	264
CALIFORNIA AUDIO LABS	021 124
CAMBRIDGE AUDIO	323 333 360
CARY AUDIO DESIGN	174 266
CENTRIOS	019
CINEVISION	091
CITIZEN	020
COBY	260

DVD
DVD- Reproductor digital de video

Manufacturer/Brand Fabricante/Marca	Set-Up Code Number El Número del Código de Sistema
ASTAR	477
AUDIOVOX	076 454 388
AUVIO	689
AVENTURA	052
AVIELO	627 628
AVION	441
AXION	039
BELCOR	116
BELL&HOWELL	333 072
BENO	423 600
BOXLIGHT	266
BRADFORD	043
BROCKWOOD	116
BROKSONIC	238
BYDESIGN	031 032
CANDLE	116 002 003 363
CAPEHART	058
CARY AUDIO DESIGN	266
CELEBRITY	001
CENTURION	116
CETRONIC	043
CHANGHONG	247
CITIZEN	116 002 003 363 043 258 103 143
CLARION	043
CLASSIC	043
CLP CLASSIC	333
COBY	640 641 671
COLORTYME	116
CONCERTO	363
CONCIERGE	073
CONTEC	043 050 051
CORNEA	116
CORONADO	143
CRAIG	043 054
CROSLEY	164
CROWN	043 143
CURTIS MATHES	116 258 363 143
CXC	043
CYBERHOME	015
DAEWOO	363 016 043 044 076 103 114 125 127 143
DAYTRON	363 143
DELL	320 164 363 618
DIGITAL PROJECTION	570
DIMENSIA	333
DREAMVISION	235
DUKANE	011 025
DUMONT	116 073
DURABRAND	096 052
DWIN	257
DYNASTY	043
DYNEX	400
EIKI	187
ELECTROBRAND	001
ELECTROGRAPH	466
ELECTROHOME	143 024 076 196
ELEKTRA	072
ELEMENT	363 494 526 622
EMERSON	028 048 043 155 005 116 363 047 050 051 076 096 143 153 154 052 514
ENVISION	116
EPSON	324 590
ESA	323
FISHER	007 057
FREEMOTION	688
FUJITSU	246 198 410
FUNAI	028 043 052
FUSION	642
FUTURETECH	043
GATEWAY	242 268
GE	073 116 008 009 034 056 074 155 333 363

DVD
DVD- Reproductor digital de video

Manufacturer/Brand Fabricante/Marca	Set-Up Code Number El Número del Código de Sistema
GEM	391
GIBRALTER	116 073
GO VIDEO	026
GOLDSTAR	113 116 102 363 106 112 127 143
GPX	674
GRUNPY	028 043
HAIER	363 501 623
HALL MARK	363
HANNSPREE	349 381
HARLEY DAVIDSON	028
HARVARD	043
HELLO KITTY	076
HIMITSU	043
HISENSE	419 442 619 630 631
HITACHI	011 166 009 010 012 023 075 143 158 072 363 250 587 613 670
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399
INFINITY	164
INFOCUS	333 230 547 548 470 532 564 595
INITIAL	035 282
INSIGNIA	350 400 052 164 403 454 457 604 617
HP	378 316 327 421
HUMAX	518
HYPERION	609
HYUNDAI	337 338
ILO	472 399